


Eastern/Carriage Stringer

Stringer notched to support treads

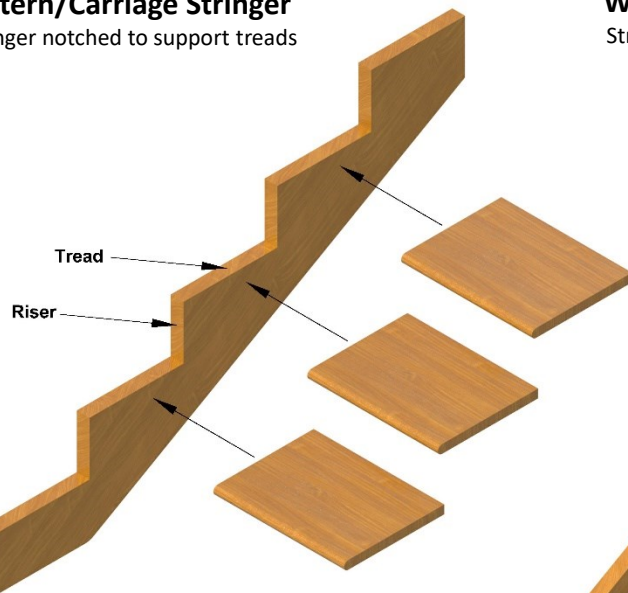

Western/Routed Stringer

Stringer routed to support treads

